



NOTES:

1. STEEL UNDER VIBRATION RAILS MUST BE LEVEL. SEE RECOMMENDED STEEL SUPPORT DRAWING FOR PROPER WEIGHT DISTRIBUTION.
2. UNIT TO VIBRATION RAIL MOUNTING HOLE LOCATIONS DIFFER FROM THOSE SHOWN ON RECOMMENDED STEEL SUPPORT DRAWING.
3. VIBRATION RAIL TO STEEL SUPPORT MOUNTING HOLES ARE SHOWN ABOVE.
4. RAILS SHOULD BE INSTALLED SUCH THAT THE RAIL IDENTIFICATION MARKS. "A" OR "B", ARE ON THE OUTBOARD SIDE AS SHOWN.
5. VIBRATION RAILS ARE NOT RECOMMENDED FOR SEISMIC APPLICATIONS, OR SUSTAINED WIND LOADINGS IN EXCESS OF 80 KPH.



VIBRATION
RAILS

VRAP0518-MB