
UNIT	eco-LRWB 8-4O12-Z
TITLE SLOPED L	ADDER INSTALLATION PACKAGE

EVAPCO, INC. Evapeo

DWG. # LDWZ0918-DA

SCALE N.T.S. DRAWN BY SLR

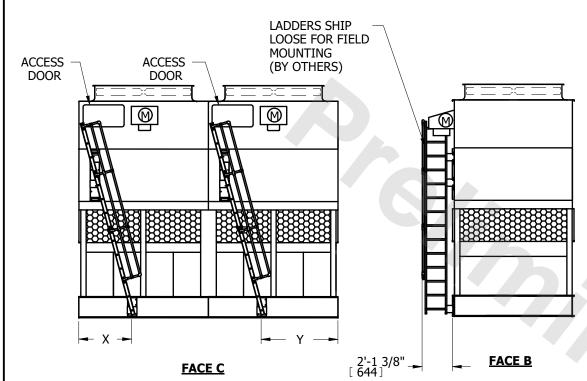

MODEL #	X DIM		Y DIM	
MODEL #	FT-IN	[mm]	FT-IN	[mm]
ESWA 153-23H, 23I, 23J	3'-1 5/8 "	956	5'-10 1/4 "	1784
ESWA 153-24H, 24I, 24J	3'-2 3/8 "	975	5'-9 1/2 "	1765
ESWA 153-25H, 25I, 25J	3'-5 1/2 "	1054	5'-6 3/8 "	1686
ESWA 153-26H, 26I, 26J	3'-7 7/8 "	1114	5'-4"	1626
ESWA 153-33H, 33I, 33J	3'-2 3/8 "	975	5'-9 1/2 "	1765
ESWA 153-34H, 34I, 34J	3'-4 3/4 "	1035	5'-7 1/8 "	1705
ESWA 153-35H, 35I, 35J	3'-7 7/8 "	1114	5'-4"	1626
ESWA 153-36H, 36I, 36J	3'-8 5/8 "	1133	5'-3 1/4 "	1607
ESWA 153-43I, 43J, 43K	3'-5 5/8 "	1057	5'-6 1/4 "	1683
ESWA 153-44I, 44J, 44K	3'-8"	1118	5'-4"	1626
ESWA 153-45I, 45J, 45K	3'-11"	1194	5'- 7/8 "	15 4 6
ESWA 153-46I, 46J, 46K	3'-11"	1194	5'- 7/8 "	1546

NOTE

- 1. REFER TO RIGGING PACK FOR LADDER AND PLATFORM MOUNTING INSTRUCTIONS.
- 2.M-FAN MOTOR LOCATION
- 3. DIMENSIONS LISTED AS FOLLOWS: ENGLISH FT-IN [METRIC] [mm]
- * THE BOTTOM OF THE LADDER IS AT THE BASE OF THE UNIT.
 IF THE UNIT IS ELEVATED THEN A LADDER EXTENSION SHOULD
 BE CONSIDERED. (CONSULT FACTORY).
 LADDER EXTENSIONS OF UP TO 3 FEET CAN BE ADDED WITHOUT
 ANY ADDITIONAL SUPPORT. FOR A LADDER EXTENSION LONGER

RIG LADDER BEFORE PIPING UNIT

CUSTOMER INSTALLATION NOTES:

- A. REMOVE LADDER BRACKET MOUNTING BOLTS (1) FROM LADDER MOUNTING CHANNELS (2) ON PAN CASING SECTIONS.
- B. LOOSEN, BUT DO NOT REMOVE, LADDER BRACKET ASSY. BOLTS (3).

THAN 3 FEET ADDITIONAL SUPPORT MUST BE PROVIDED BY OTHERS.

- C. TO ASSEMBLE, SLIDE LADDER BRACKET ASSY. (4) OVER LADDER MOUNTING CHANNELS (2) LOCATED ON PAN AND CASING (DO NOT REMOVE LADDER BRACKET ASSY. (4) FROM LADDER.)
- D. ALIGN HOLES AND REINSTALL LADDER BRACKET MOUNTING BOLTS (1) THROUGH LADDER BRACKET ASSY. (4) AND LADDER MOUNTING CHANNELS (2).
- E. TIGHTEN ALL BOLTS.
- F. TIGHTEN ADJUSTING SCREW (5) IN THE ADJUSTABLE MOUNTING BRACKETS WHEN APPLICABLE.

