


SLOPED LADDER ARR.

DWG. # LDW22436EA-ST

NOTES:

1. LADDER AND BRACKETS SHIP LOOSE. FIELD INSTALLATION BY OTHERS IS REQUIRED.
2. REFER TO RIGGING PACK FOR LADDER AND PLATFORM MOUNTING INSTRUCTIONS.
3. RIG LADDER BEFORE INSTALLING PIPEWORK TO UNIT.

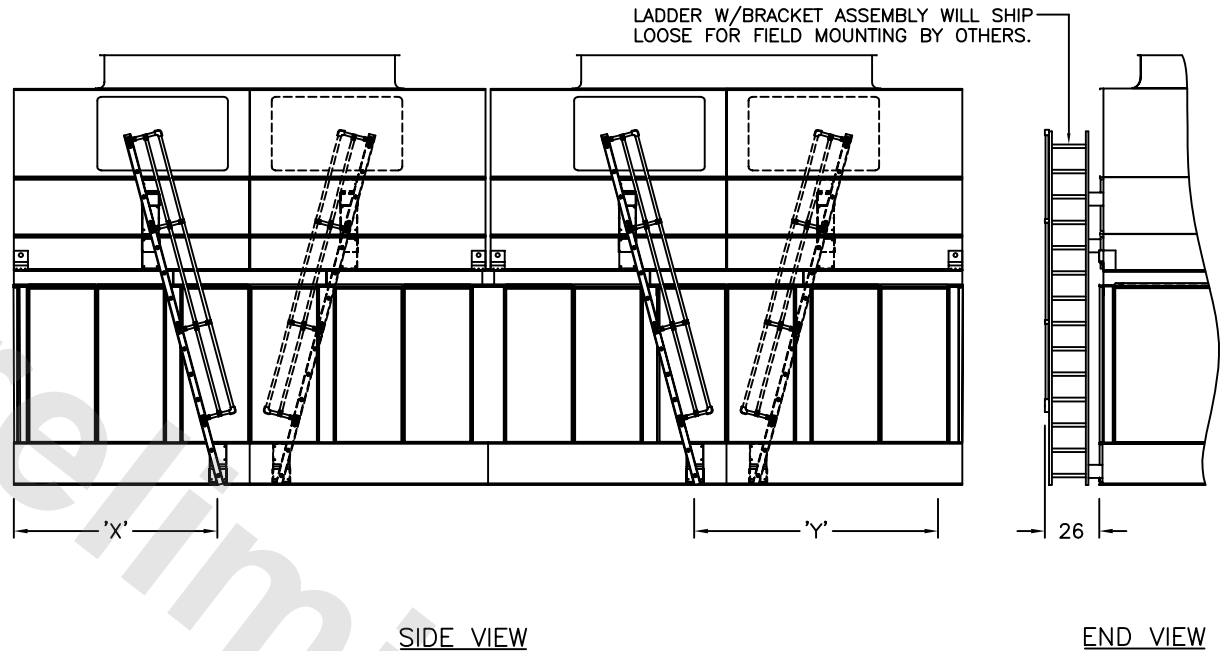

MODEL NUMBER		'X'	'Y'
COOLER	CONDENSER		
ATW 866-3L,3M	—	93	123
ATW 866-4L,4M	ATC 2490B,2647B,2765B	95 3/8	120 1/2
ATW 866-5M,5N	ATC 2900B,3029B,3210B	100 5/8	115 1/4
ATW 866-6N,6O	ATC 3313B,3459B	98 3/8	117 1/2

CUSTOMER INSTALLATION NOTES:

- a. REMOVE LADDER BRACKET MOUNTING BOLTS (1) FROM LADDER MOUNTING CHANNELS (2) ON PAN AND CASING SECTIONS.
- b. LOOSEN, BUT DO NOT REMOVE, LADDER BRACKET AND ASSY. BOLTS (3).
- c. TO ASSEMBLE, SLIDE LADDER BRACKET ASSY. (4) OVER LADDER MOUNTING CHANNELS (2) LOCATED ON PAN AND CASING (DO NOT REMOVE LADDER BRACKET ASSY. (4) FROM LADDER.)
- d. ALIGN HOLES AND REINSTALL LADDER BRACKET MOUNTING BOLTS (1) THROUGH LADDER BRACKET ASSY. (4) AND LADDER MOUNTING CHANNELS (2).
- e. TIGHTEN ALL BOLTS.
- f. TIGHTEN ADJUSTING SCREW (5) IN THE ADJUSTABLE MOUNTING BRACKETS WHEN APPLICABLE.

