


PAN REAR VIEW
ALL 8x (SS) LSWA/CB
ALL 3Mx LSWA/CB
ALL 12xPMCB

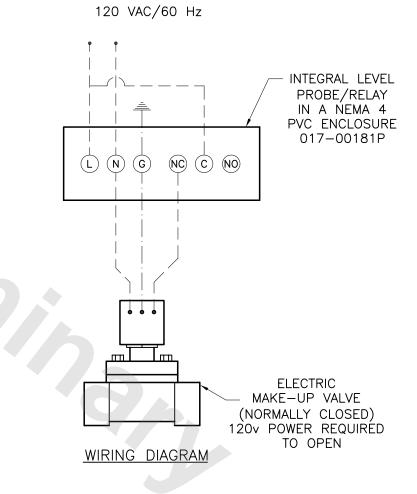

NOTES:

- 1. DASHED LINES INDICATE WIRING BY OTHERS.
- 2. PIPING BY OTHERS.
- 3. LEVEL PROBE STANDPIPE ASSEMBLY, MAKE-UP VALVE AND Y-STRAINER TO SHIP LOOSE FOR FIELD MOUNTING BY OTHERS.
- 4. SEE CERTIFIED PRINT FOR MAKE-UP LOCATION.
- 5. STANDPIPE TO BE HEAT TRACED AND INSULATED FOR WINTER OPERATION (BY OTHERS).
- 6. THE ELECTRÒNIC WATER' LEVEL CONTROL ON THIS UNIT WILL MAINTAIN THE PROPER OPERATING WATER LEVEL. HOWEVER, BEFORE INITIAL START-UP THE UNIT MUST BE MANUALLY FILLED TO WITHIN 1" OF THE OVERFLOW.
- 7. FOR EASE OF MAINTENANCE, A SHUT-OFF VALVE IS RECOMMENDED UPSTREAM OF Y-STRAINER.

	UNIT SIZE	CIZE	VALVE	STRAINER	Α	В
	UNII SIZE	SIZE	PART NUMBER	PART NUMBER	4	Ь
	8x12	1	017-00153P	017-00280P	26 3/8	13
	8x18	1 1/2	017-00154P	017-00281P	27 7/8	14 1/2
	8×24	1 1/2	017-00154P	017 003910	26 3/8	1.3
	3Mx/12x12	1 1/2	017-001346	017-002816	20 3/0	15
	3M×18	1 1/2	017-00154P	017-00281P	28 5/8	15 1/4
	8x36	2	017-00155P	017-00282P	27 7/8	14 1/2
	3Mx/12x24	2	017-00155P	017-00282P	26 3/8	13
	3Mx/12x36	2	017-00155P	017-00282P	28 5/8	15 1 / 4
	12x18					13 1/4



W3PWMWML-EB